

# How to assign Keitoku model code on GB-ER

Issued on : 08.05.28

GB-□□□ER★□□□

┌──────────┐  
<Effective length>

┌──────────┐  
<Reference point position>

<Direction of cable to exit>

L: Exit to left (Std)

R: Exit to right

◎At the center of measuring length:C(Std.)

◎Distance of Ref. point from the left measuring end.

Example: 850mm → **850**

Use alphabet to represent the foremost two digits in case of effective length being more than 1000mm in the following manner.

1,000~1,099mm A    1,700~1,799mm H

1,100~1,199mm B    1,800~1,899mm J

1,200~1,299mm C    1,900~1,999mm K

1,300~1,399mm D    2,000~2,200mm L

1,400~1,499mm E

1,500~1,599mm F

1,600~1,699mm G

Example: 1,050mm → **A50**